



JOINT REPAIR - WALL TO SLAB

REFER TO APPLICATION INSTRUCTION 5.12